

What should I do in case of fire?

- » Keep calm!
- » In the event of heavy smoke, stay as low to the ground as possible as you make your way to the exit.
- » Leave the flat immediately with all occupants.
Caution! Do not use a smoke-filled staircase as just a few breaths of smoke from a fire can lead to unconsciousness and ultimately death.
- » Help elderly, disabled and sick flatmates without putting yourself at risk.
- » Keep doors and windows of rooms which are ablaze shut to prevent fire and smoke from spreading.
- » Do not try to use lifts.
- » Warn other tenants.
- » Please be aware that the fire brigade is not directly alerted in the event of an alarm.
- » **Please alert the fire brigade by ringing 112.**

Important information for the fire brigade:

- » **Who you are (name, telephone no.)**
- » **Where the fire is (address)**
- » **What happened (size of the fire)**
- » **What is the situation like (injured persons, etc.)**
- » **Wait for instructions from the fire brigade**

1237-EN-04-2020

KALO
einfach persönlicher.



**KALORIMETA on-call service
for smoke alarms**

0800 0008718
Toll-free hotline

*“The right smoke alarm for
your safety – our personal
commitment to you.”*

Mike Plambeck,
Technical Inspection at KALO

KALO
einfach persönlicher.

KALORIMETA GmbH
Heidenkampsweg 40
20097 Hamburg, Germany
www.remotus.de

Protecting your life

kaloREMOTUS smoke alarms are installed in the rooms you live in:
high quality and modern products.

This installation serves to protect your life and your health.

Smoke alarms do not extinguish fires, they can only signal an alert. The assembled devices warn you early and reliably against smouldering fires as well as open fires that produce smoke. They thus give you and all persons in your flat the necessary survival time to get to safety and ring the fire brigade on telephone number 112.


A sophisticated device with convenient features

The advanced kaloREMOTUS smoke alarm features an optical sensor and a temperature sensor for regularly checking whether smoke is present in the detector. If a fire is sensed, the device issues a signal by producing a loud alarm sound and a flashing red indicator.

In the normal state, a flashing indicator signals that the device is ready for operation every 46 seconds. For your comfort, the display light is dimmed at night. As smoke is detected by optical and thermal means, the device does not emit any hazardous radiation.

Safe assembly – important information

The smoke alarms are carefully installed by KALO according to the mandatory DIN 14676 application standard. Smoke alarms therefore must not be re-

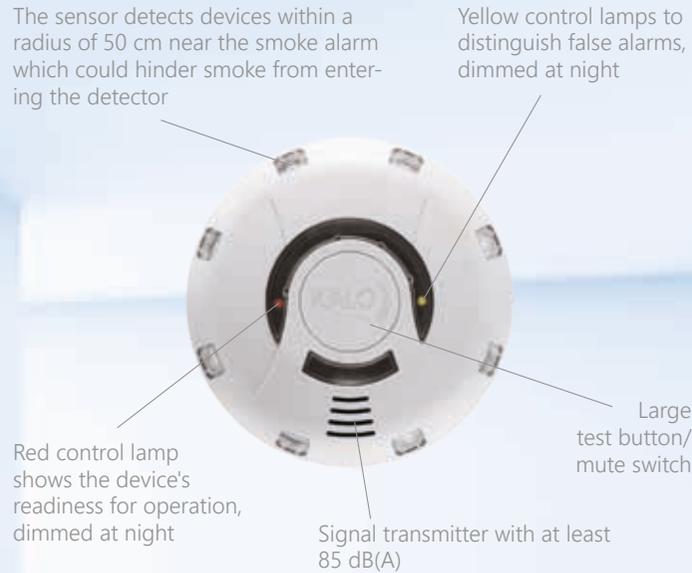

moved from their original place of installation and installed elsewhere. Painting, wallpapering or concealing the kaloREMOTUS leads to malfunctions or even to device failure. In principle, the kaloREMOTUS may only be exposed to dirt resulting from normal usage of a flat. Protect the smoke alarm when renovating to prevent contaminants from penetrating the device. The smoke alarm must be returned to its original state immediately after any renovation work has been completed. Afterwards, please check that the smoke alarm functions properly by pressing the test button.

Should the kaloREMOTUS become damaged, please call the service number indicated on the back of the device. In case of any changes to the rooms (e.g. converting a home office into a children's room), you must inform your property management or landlord.

Annual inspection

The kaloREMOTUS smoke alarm is equipped with a high-performance lithium battery, thus making replacing the battery unnecessary throughout the entire service life. However, an inspection is required at regular intervals according to the requirements of the DIN 14676 which is carried out for you. This inspection is conducted automatically by kaloREMOTUS and does not require giving KALO access to the flat, thus making annoying appointments unnecessary.

The kaloREMOTUS only sends functional parameters which ensure the smoke alarm is ready for use.

What should I do if the smoke alarm issues a signal?

Keep calm. In case of a constant alarm signal, first check the rooms for fire. If you cannot see fire, activate the mute function by pressing the test button (you may also use a broom handle, if necessary).

Ventilate the room well, and check whether water vapour, cooking or non-hazardous sources of smoke are the cause. Once the potential cause of smoke has been eliminated by venting, the smoke alarm will return to its normal operation.

If the yellow LED flashes together with the red one and an alarm is sounding synchronously, the device is malfunctioning. Activate the mute feature, if necessary. The mute function suppresses the signal for at least 10 hours. Ring the service number indicated on the back of the device and report the malfunction.