

## What should I do in case of fire?

- » Keep calm!
- » In the event of heavy smoke, stay as low to the ground as possible as you make your way to the exit.
- » Leave the flat immediately with all occupants.  
**Caution!** Do not use a smoke-filled staircase as just a few breaths of smoke from a fire can lead to unconsciousness and ultimately death.
- » Help elderly, disabled and sick flatmates without putting yourself at risk.
- » Keep doors and windows of rooms which are ablaze shut to prevent fire and smoke from spreading.
- » Do not try to use lifts.
- » Warn other tenants.
- » **Please alert the fire brigade by ringing 112.**

## Important information for the fire brigade:

- » **Who you are (name, telephone no., etc.).**
- » **Where the fire is (address).**
- » **What happened (size of the fire).**
- » **What the situation is like (injured persons, etc.).**
- » **Wait for instructions from the fire brigade.**

**KALO**  
einfach persönlicher.



### KALORIMETA on-call service for smoke alarms

**+49 (0)1802 001 018**

6 cent/call from a German landline

**+49 (0)1802 001 018**

Max. 60 cent/call from the German mobile network  
20 cent/call from a German landline

“The right smoke alarm for  
your safety – our personal  
commitment to you.”

Mike Plambeck,  
Technical Inspection at KALO

**KALO**  
einfach persönlicher.

KALORIMETA GmbH  
Heidenkampsweg 40  
20097 Hamburg  
www.kalo.de

## Protecting your life

K GENIUS smoke alarms, a high-quality product manufactured by Detectomat in Europe, have been installed in the rooms you live in.


This installation serves to protect your life and your health.

The assembled devices warn you early and reliably against smouldering fires as well as open fires that produce smoke. They thus give you and all persons in your flat the necessary survival time to get to safety and ring the fire brigade on telephone number 112 and/or take any necessary fire-fighting measures.

## A sophisticated device with convenient features

The advanced K GENIUS smoke alarm features an optical sensor which regularly checks whether smoke is present in the detector. If a fire is sensed, the device issues a signal by producing a loud alarm sound and a flashing red indicator.

In the normal state, a flashing indicator signals that the device is ready for operation every 48 seconds. For your comfort, the display light is dimmed at night. As smoke is detected by optical means, the device does not emit any hazardous rays.

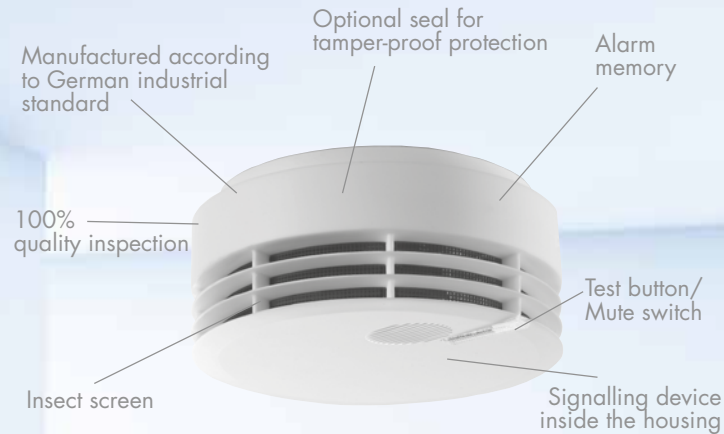

## Safe installation – important information

The smoke alarms are carefully installed by KALO according to the mandatory DIN14676 application standard. Smoke alarms therefore must not be removed from their original place of installation and installed elsewhere. Painting, wallpapering or concealing the K GENIUS device leads to malfunctions or even to device failure. As a general rule, the K GENIUS may only be exposed to dirt resulting from normal usage of a flat.

Smoke alarms do not extinguish fires, they can only signal an alert. Should the K GENIUS become damaged, please call the service number indicated on the back of the device. In case of any changes to the rooms (e.g. converting a home office into a children's room), please inform your property management or landlord.

## Annual maintenance

The K GENIUS smoke alarm is equipped with a high-performance lithium battery, thus making replacing the battery unnecessary throughout the entire service life. However, conventional smoke alarms require maintenance in accordance with DIN 14676 at annual intervals, which KALO will carry out for you (if possible when reading heat cost allocators). This includes testing that the smoke alarm device functions properly as well as unimpeded smoke access to the detector.

## What should I do if the smoke alarm emits a signal?

Keep calm. In case of a constant alarm signal, first check the rooms for fire. If you cannot see fire, activate the mute function by pressing the button (you may also use a broom handle, if necessary).

Ventilate the room well, and check whether water vapour, cooking or non-hazardous sources of smoke are the cause. Once the potential cause of smoke has been eliminated by venting, the smoke alarm will return to its normal operation.

If the smoke alarm continues to emit visual and audible signals, the device has a malfunction. Activate the mute feature. The smoke detector is still active and has full functionality. The mute function suppresses the malfunction signal for at least 24 hours. When this occurs, call the service hotline indicated on the back of the unit.